
Makita GA4030K Disk Cover Removal

Prerequisite Only


Written By: Nyssa Backes

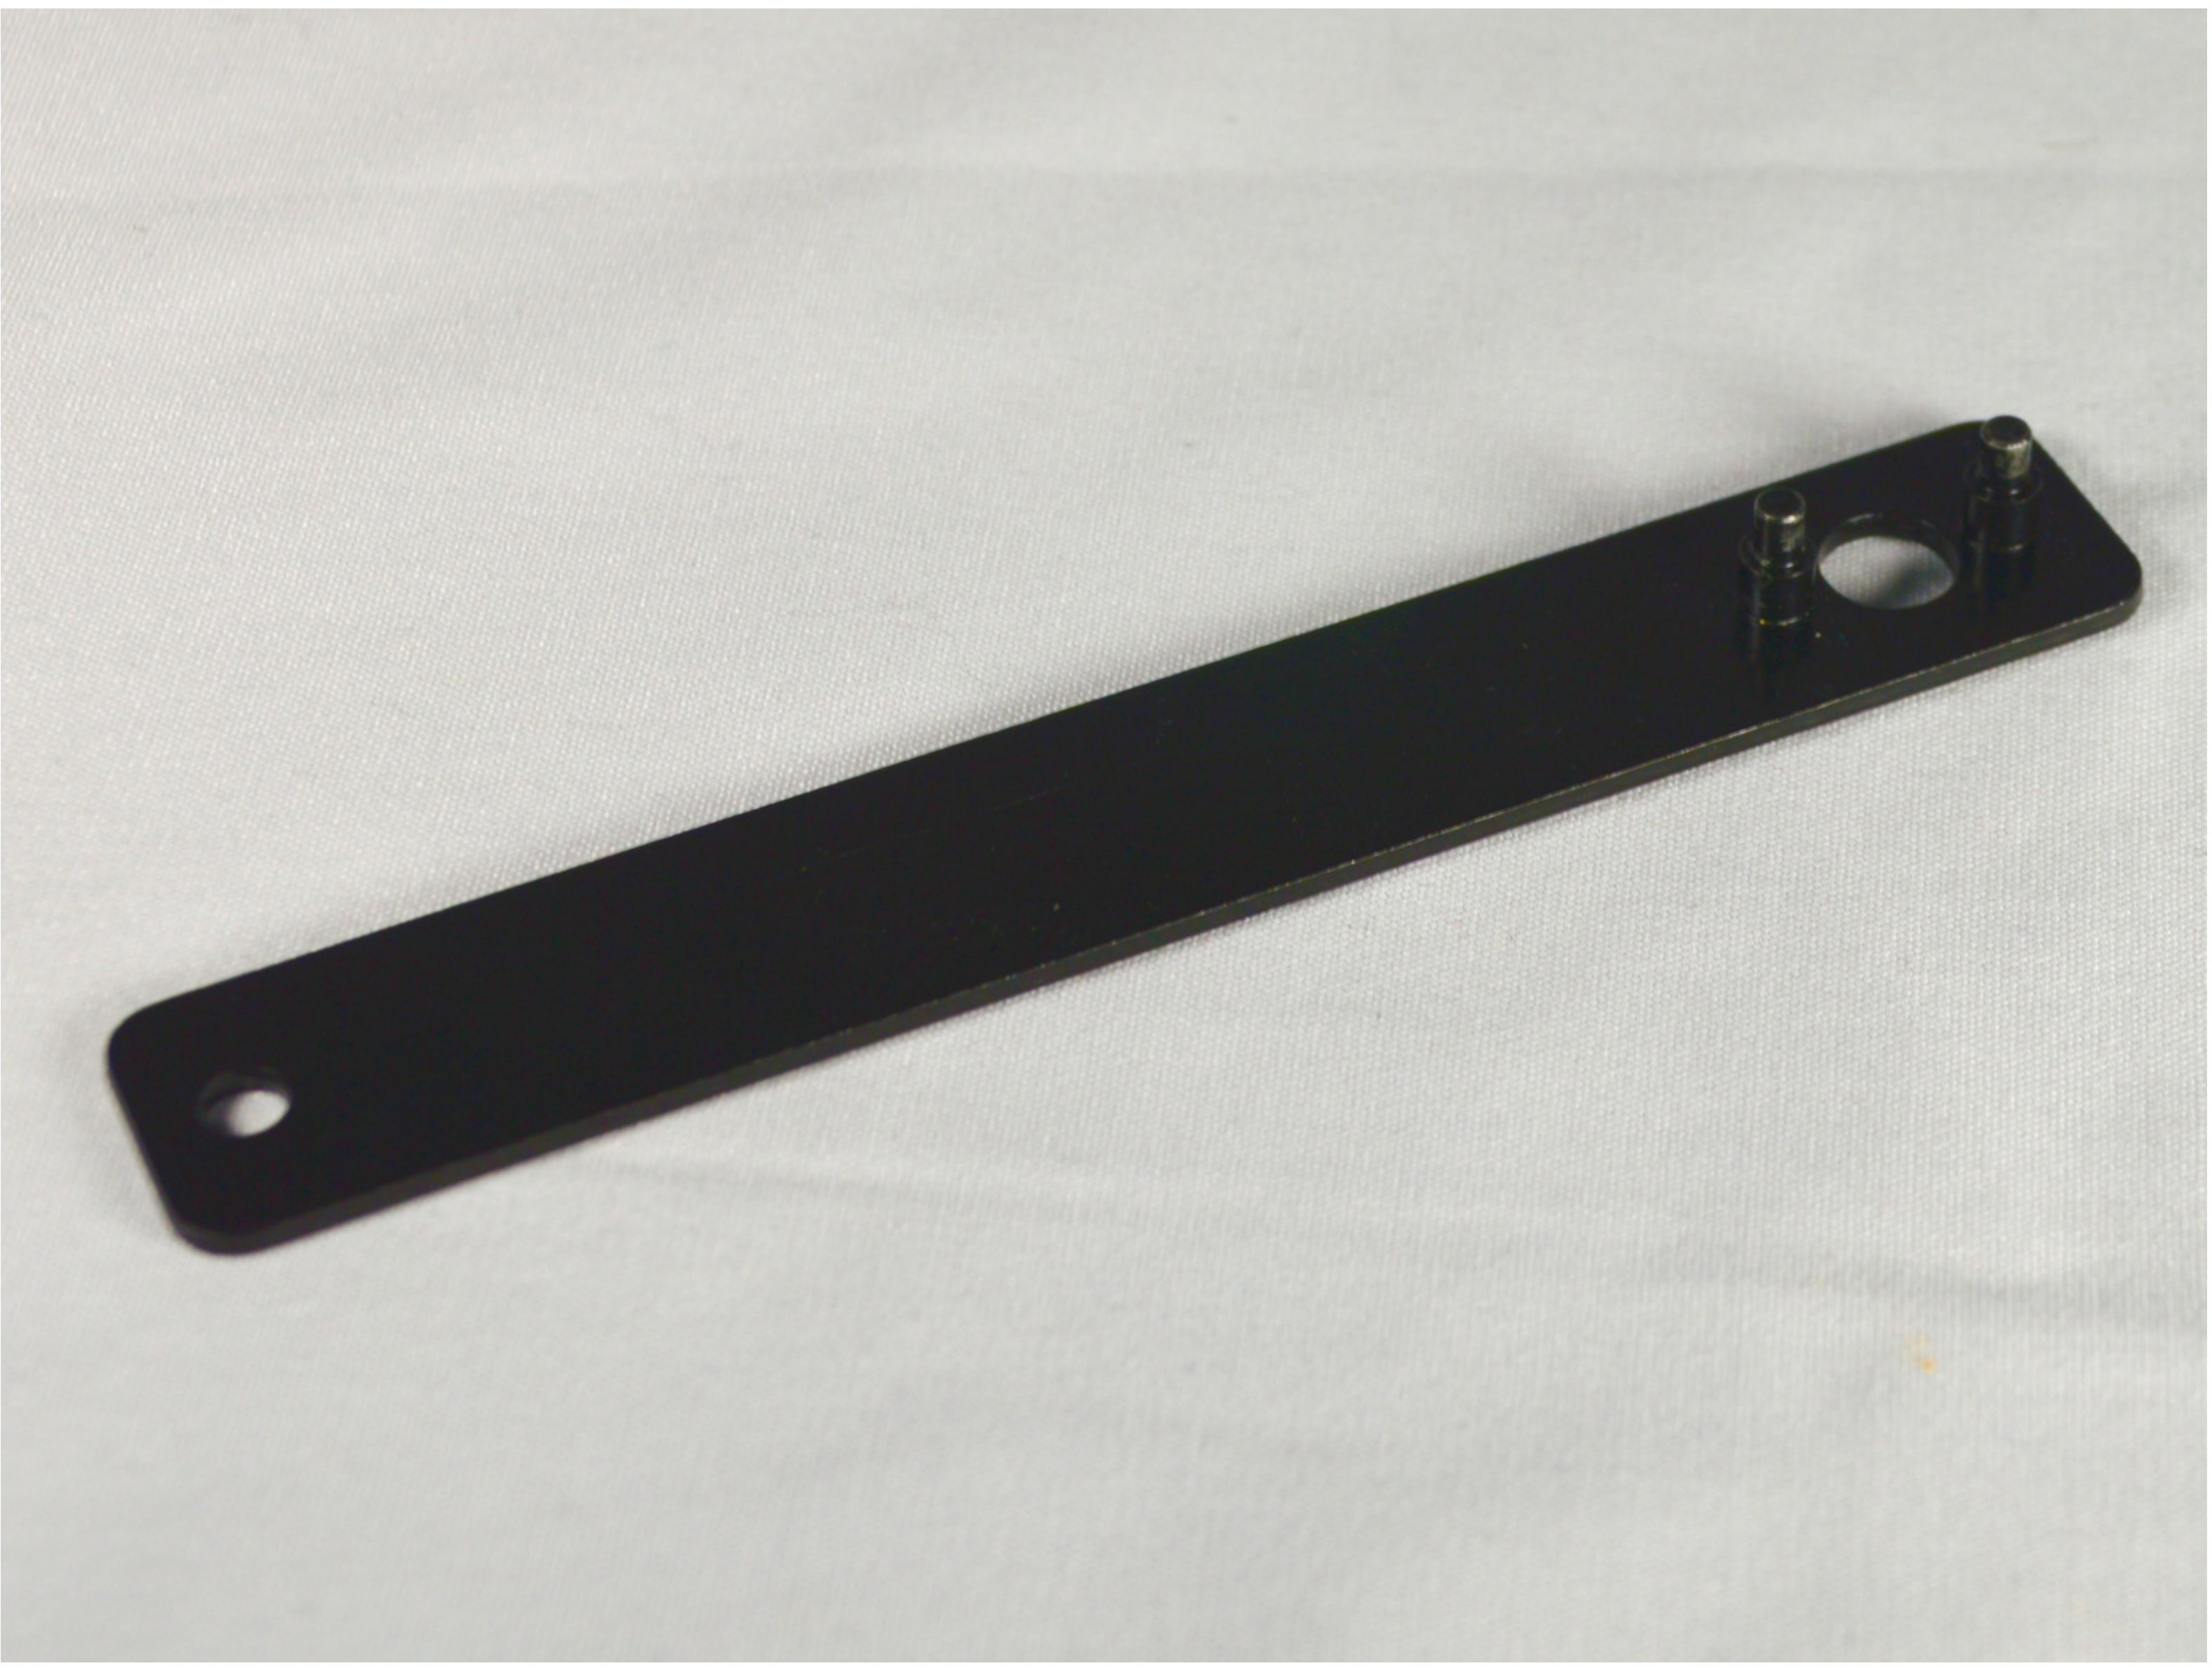

TOOLS:

- Phillips #2 Screwdriver (1)

Step 1 — Disk Cover




- Check for the provided lock nut wrench. This is used for loosening the piece that keeps the disk and cover attached.

Step 2



- Unscrew the handle unit until it is removed completely.


Step 3





- Hold the black switch located on the front casing.
- Still holding the switch, use the lock nut wrench to loosen the silver disk holding everything in place.
  - Once loose, remove the silver disk and/or your grinding disk.

Step 4





- Using a Phillips #02 screwdriver, remove the 15 mm pan head screw holding the cover in place.
- Remove the cover by lining up the knob on the cover with the notch in face plate.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-28 05:06:58 PM.